


Pulvix 602

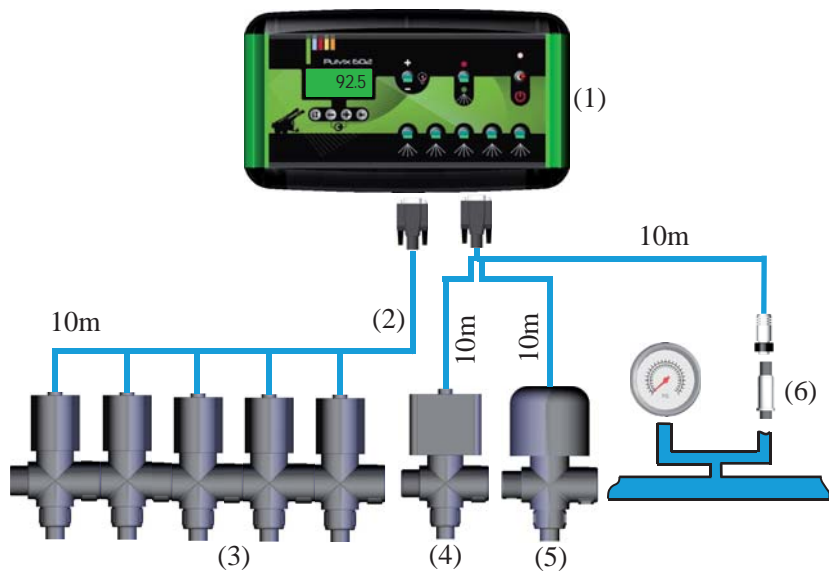

System configuration:

- (1) Electronic controller inside cab
- (2) Wiring harness to connect controller [\[version\]](#)
- (3) Boom section valves [\[option\]](#)
- (4) Control valve [\[option\]](#)
- (5) Main shutoff valve [\[option\]](#)
- (6) Pressure sensor



Boom sections control

Fonctions:

- Electrical actuation of pressure control valve
- Master switch for opening and closing boom sections
- Electrical control of boom section valves (solenoids or servo valves)
- Maximum recorded pressure display
- Audible alarm for overpressure and underpressure
- Automatic calibration of pressure sensor

Versions:

- Control of 2, 4 or 5 boom sections
- 0-10 bars or 0-50 bars

Options:

- Pressure control valve
- Boom section valve
- Main shutoff valve