

Surface 200




Areameter & Speedometer

Functions:

- Partial area meter
- Total area meter
- Travel speed display
- Implement width set up

Versions:

- Stop of counting by position sensor

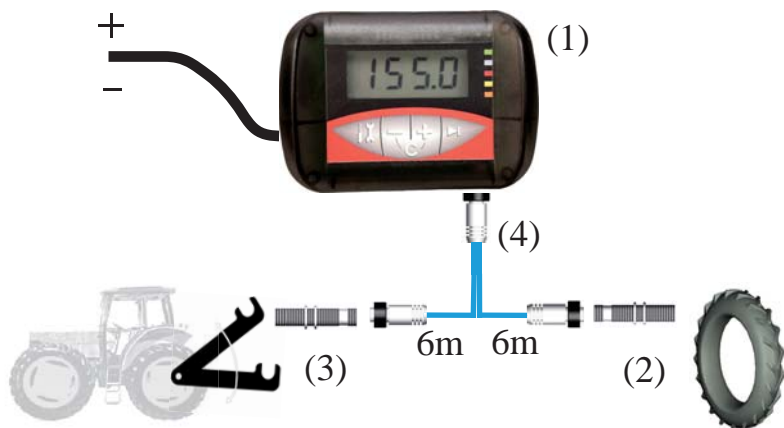

System configuration:

- (1) Electronic controller inside cab
- (2) Ground speed sensor
- (3) Position sensor [\[version\]](#)
- (4) Wiring harness to connect sensors [\[version\]](#)